


Before installing view CEI standards on our website.

Note: Protection against electric shock available (earthing and bonding)

The installation should be done by an electrician.

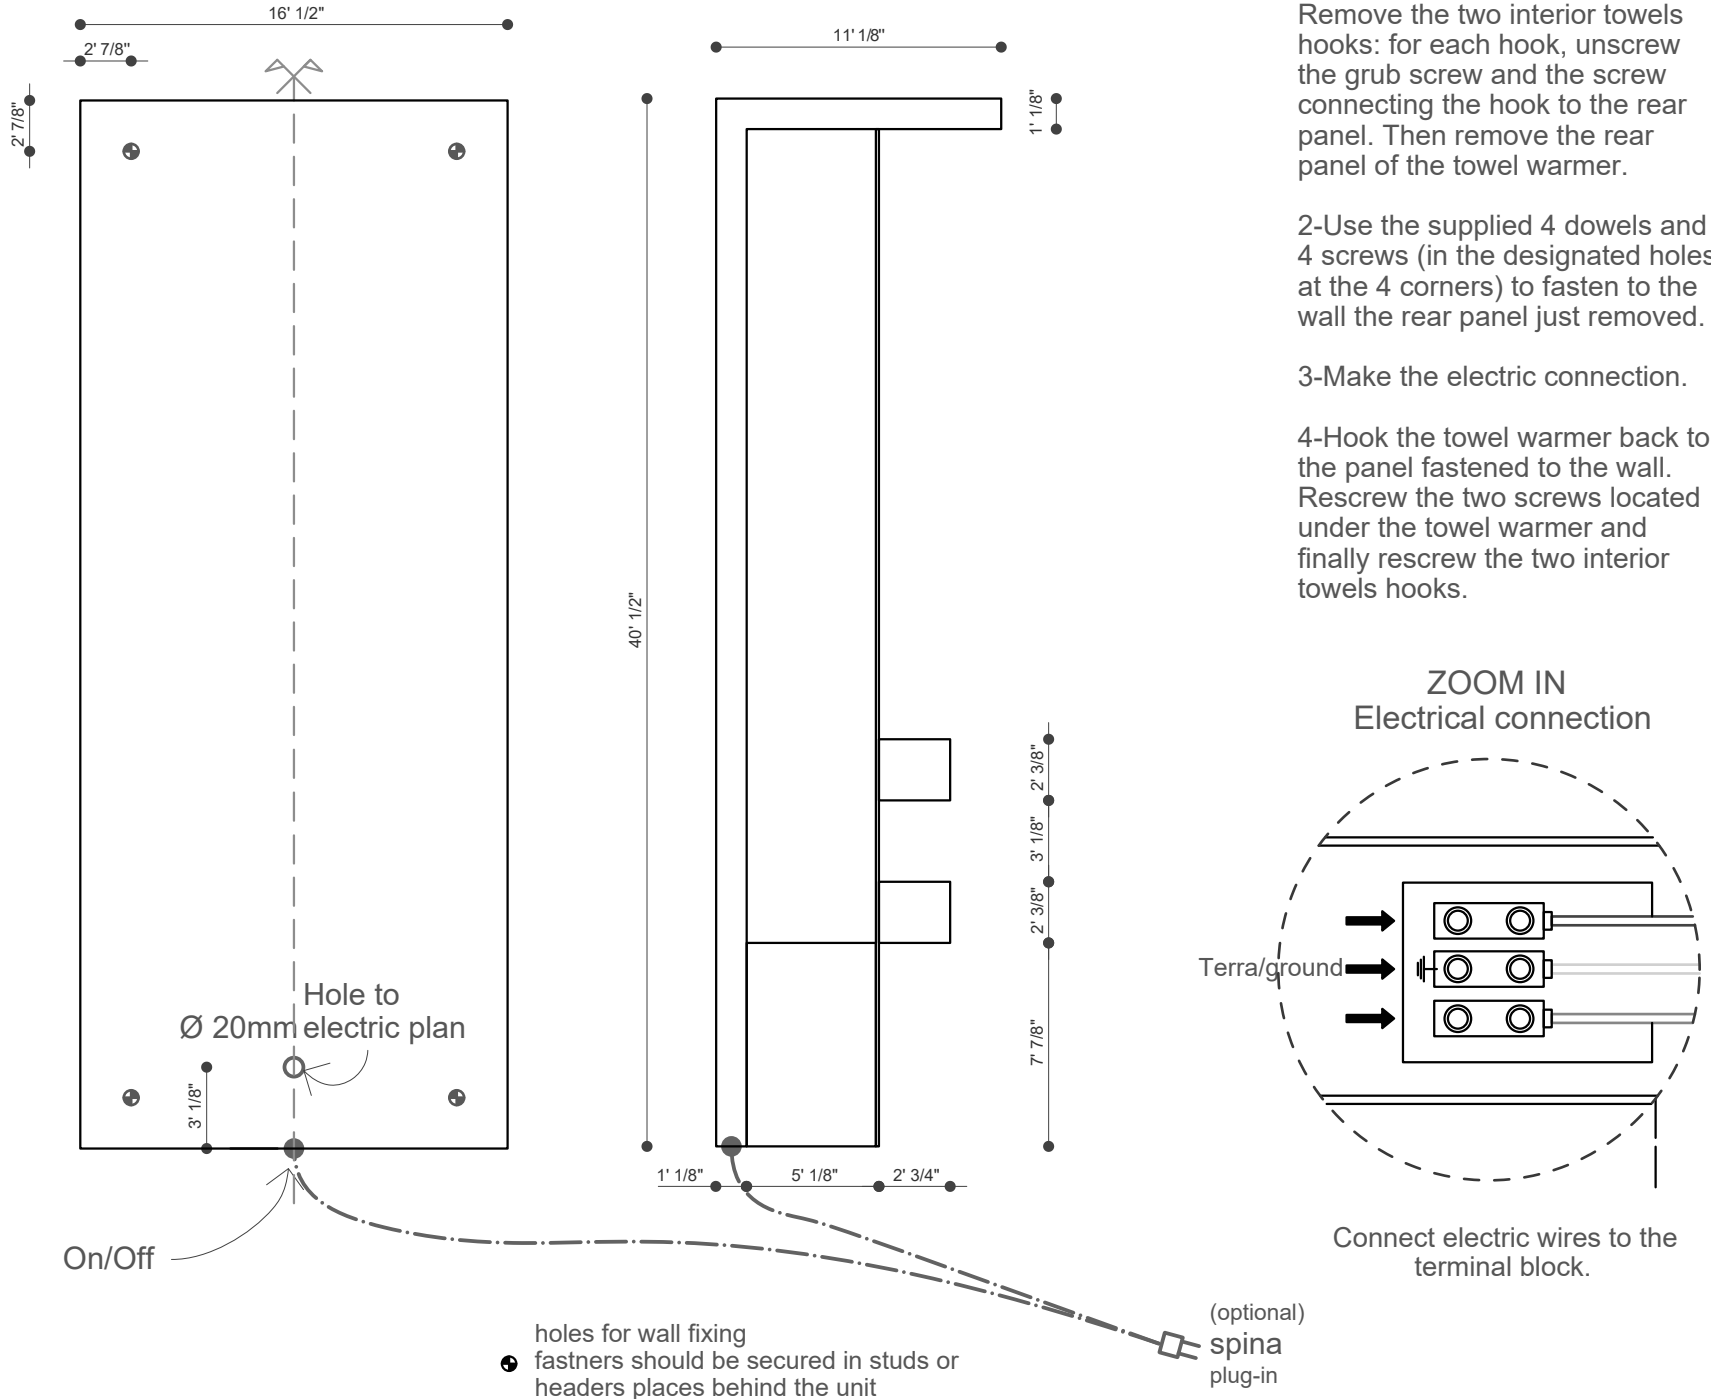

1- Unscrew the two screws located under the towel warmer. Remove the two interior towels hooks: for each hook, unscrew the grub screw and the screw connecting the hook to the rear panel. Then remove the rear panel of the towel warmer.

2-Use the supplied 4 dowels and 4 screws (in the designated holes at the 4 corners) to fasten to the wall the rear panel just removed.

3-Make the electric connection.

4-Hook the towel warmer back to the panel fastened to the wall. Rescrew the two screws located under the towel warmer and finally rescrew the two interior towels hooks.